Service at the indicated distance or time-whichever comes first	miles x 1000	7.5	30	45	60	75	90	105	120		3	88	
	km x 1000	12	48	72	96	120	144	168	193				
Check engine oil and coolant				Ch	eck oi	l and	coola	nt at	each f	uel st	ор	120	
Replace engine oil	,												
Rotate tires (Check tire inflation & condition at least once per month)											3	3	
Replace engine oil filter													
Inspect front and rear brakes												8	
Check parking brake adjustment													
Visually inspect the following items							j j				Ü		
Tie rod ends													
Suspension components												8	
Driveshaft boots													
Brake hoses and lines (including ABS)							j j					8	
All fluid levels & condition of fluids													
*Exhaust system							j j				Ü	8	
*Fuel lines & connections													
Inspect and adjust drive belt					3	Ÿ.						8	
Replace dust and pollen filter													
eplace transmission fluid MT		Every 120,000 miles or 72 months											
AT													
Inspect idle speed					3	Ĭ.					- 3	8	
Replace rear differential fluid (4WD)		Vehicle not equipped with rear differential											
Service the following	items at reco	mmer	nded i	interv	als.				1111				
Replace air cleaner element					Ever	y 30,0	000 m	iles (4	18,000	km)			
Replace timing belt, water pump, drive belts and engine coolant													
Replace spark plugs		Every 110,000 miles (176,000 km)											
Inspect valve clearance		Inspect every 110,000 miles (176,000 km), otherwise adjust or if noisy											
Replace engine coolant		At 120,000 miles (192,000 km) or 10 years, then every 60k mil (96,000 km) or 5 years											
Replace brake fluid			Every 3 years (independent of mileage)										
*: Replace at 120,000 miles or 6 years, then every 90k miles or 5 years		·s	\$171.77	\$52.94	\$171.77	\$52.94	\$52.94	\$754.01	\$17	1 1 1 2		77	
#: See information on maintenance & emissions warranty		\$52.94							171.77				
Brake fluid flush: \$124,95+tax			_		7				~			8	